When wiring to Increased Safety terminal enclosures, you are only permitted to connect one wire into each way on the terminal block, unless a pair of wires are crimped into a suitable ferrule. Wire sizes allowable are 0.5sgmm to 4.0sgmm


The terminals are only permitted to be wired with cable in an ambient temperature range of between -10°C to 80°C. All terminal screws, used or unused, must be fully tightened down.

Leads connected to the terminals must be insulated for the appropriate voltage and this insulation must extend to within 1mm of the metal of the terminal throat

Testing unit operation

The push button unit can be tested without the need to replace any element.

To test, lift the cover lift flap to reveal the push button. The button should be pressed into the body to activate the unit and place it into the operated condition.

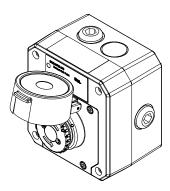


The call point switch will now change over its contacts to operate the alarm.


Once testing is complete the unit needs to be reset from the operated condition.

Rotate the push button anticlockwise by an angle of 55°, see guide alignment marks on the button and cover, shown below (1). The push button should pop back up to its original position.


Ensure that the push button has also twisted back clockwise by 55° to its original position see guide marks on button and cover, shown below (2). The unit is now reset







2. Button should pop up and twist back to original position

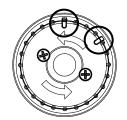

Note: use alignment marks circled to indicate the push buttons status/position


Unit currently shown as 'standby condition'

Resetting an operated unit is the same as resetting a tested unit



INSTRUCTION MANUAL GNExCP6A-PB Push Button Manual Call Point For use in Flammable Gas and Dust Atmospheres

GNExCP6A-PB Manual Call Point - Push Button For use in Flammable Gas and Combustible Dust Atmospheres.

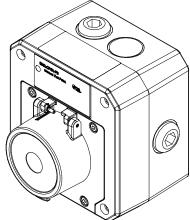

1) Introduction

The GNExCP6A-PB is a push button manual call point which is certified to the European and International Gas and Dust standards. The unit meets the requirements of the ATEX directive 94/9/EC and IECEx scheme.

The call point can be used in hazardous areas where potentially flammable gas and dust atmospheres may be present.

The GNExCP6A-PB has no monitoring resistors. The units are Group II, EPL (equipment protection level) Gb. The equipment is certified 'Ex e d IIC T6 Gb' and as such may be used in Zones 1 and 2 with flammable gases and vapours with gas groups IIA, IIB & IIC and temperature classes T1, T2, T3, T4, T5 and T6.

These units are also Group III. EPL Db. The equipment is certified 'Ex t IIIC T60°C Db' and as such may be used in Zones 21 and 22 for combustible dusts groups IIIA, IIIB & IIIC.

All units have a rating label, which carries the following important information:-

Unit Type No.: GNExCP6A-PB Manual Call Point

Input Voltage: AC voltage 250V Max Current 5.0A Max DC voltage 50V Max Current 1.0A Max

Code: Ex e d IIC T6 Gb Ex t IIIC T60 °C Db -40°C <= Ta <= +55°C

Certificate No.: SIRA 09ATEX3286X IECEx SIR 09.0121X



II 2GD

CE Marking Notified body No. (0518

Year/Serial No. i.e. 12/1CP6APB000001

WARNING - DO NOT OPEN WHEN AN EXPLOSIVE ATMOSPHERE MAY BE PRESENT

3) Type Approval Standards

The call point has an EC Type examination certificate issued by SIRA and have been approved to the following standards:-

IEC 60079-0:2007 EN 60079-1:2004 / IEC 60079-1:2003 EN 60079-7:2007 / IEC 60079-7:2006 IEC 60079-18:2009

EN 61241-1:2004 / IEC 61241-1:2004

The equipment is certified for use in ambient temperatures in the range -40°C to +55°C and shall not be used outside this range.

Installation Requirements

Installation of this equipment shall only be carried out by suitably trained personnel in accordance with the applicable code of practice e.g. IEC 60079-14/EN 60079-14

- A) Repair of this equipment shall only be carried out by the manufacturer or in accordance with the applicable code of practice e.g. IEC 60079-19/EN 60079-19.
- B) The certification of this equipment relies on the following materials used in its construction:

Enclosure: GRP - Glass Reinforced Polyester

Through enclosure mechanism: Plastic Nylon Zytel Injection Moulded

Sealing of enclosure and mechanism: O-ring Acrylonitrile-Butadiene Rubber

If the equipment is likely to come into contact with aggressive substances, then it is the responsibility of the user to take suitable precautions that prevent it from being adversely affected, thus ensuring that the type of protection is not compromised.

"Aggressive substances" - e.g. acidic liquids, gases or solvents that may affect polymeric materials.


"Suitable precautions" - e.g. regular checks as part of routine inspections or establishing from the material's data sheet that it is resistant to specific chemicals.

Refer to certificates SIRA 09ATEX3286X and IECEx SIR 09.0121X for special conditions of safe

Under extreme conditions the unit may generate an ignition-capable level of electrostatic charges. The unit must not be installed in a location where it may be subjected to external conditions (such as high pressure steam) which may cause a build-up of electrostatic charges on non-conducting surfaces. Cleaning of the unit must only be carried out with a damp cloth.

5) Call Point Location and Mounting


The location of the call point should enable ease of access for operation and testing. The unit should be mounted using the 4 off fixing holes which will accept up to M4 sized fixings.

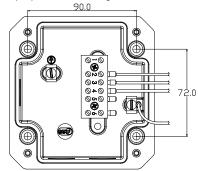

View of base unit showing fixing centres (in mm).

To gain access to the mounting holes in the base the front cover must be removed.

This is achieved by removing the 4 off M4 cap head bolts holding on the cover

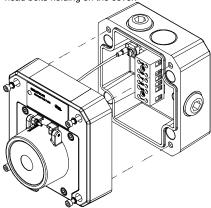


Once the screws are removed the cover will hang down out of the way to gain access to the Ex e terminal block, the internal earth terminal and mounting hole recesses.

6) Earthing

The unit has an internal earth terminal.

It is recommended that a cable crimp lug is used on the earth wires

The internal earth wire is placed under a earth clamp which will stop the cable twisting. This is secured by an M4 screw and spring washer.

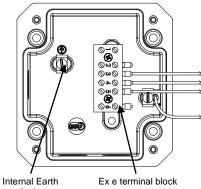


terminal

Cable connections

There are 3 off cable entries for M20x1.5 Ex e approved cable glands or stopping plugs with a minimum ingress protection of IP66.

The unit can be wired in a number of different ways depending whether normally open or normally closed contacts are required.

Single microswitch units:



'Standby Unit in condition' unoperated Terminal +(2,3) & (6) switch contacts closed Terminals +(2,3) & -(4,5) switch contacts open


M/S 1 Unit in 'Operated condition' (button pushed in)

microswitch contacts changed


Terminal +(2,3) & (6) switch contacts open

Terminals +(2,3) & -(4,5) switch contacts closed

Double microswitch units:



'Standby Unit in condition' unoperated Terminal +(1) & (3) Terminal +(4) & (6) switch contacts closed Terminals +(1) & -(2) Terminals +(4) & -(5) switch contacts open



(button pushed in) microswitch contacts changed over Terminal +(1) & (3) Terminal +(4) & (6) switch contacts open Terminals +(1) & -(2)

Terminals +(4) & +(5) switch contacts closed

EC DECLARATION OF CONFORMITY


Manufacturer: European Safety Systems Ltd.

Impress House, Mansell Road, Acton

London, W3 7QH, UK

Equipment Type: GNExCP6A-BG, GNExCP6A-PB, GNExCP6A-PT,

GNExCP6B-BG, GNExCP6B-PB, GNExCP6B-PT



Notified Body for EC type Examination: Sira Certification Service

Notified Body No.: 0518

Rake Lane, Eccleston, Chester CH4 9JN, UK

EC-type Examination Certificate: Sira 09ATEX3286X

Notified Body for Quality Assurance Notification: Sira Certification Service

Notified Body No.: 0518

Rake Lane, Eccleston, Chester CH4 9JN, UK

Quality Assurance Notification: SIRA 05 ATEX M342

Provisions fulfilled by the equipment: II 2 GD

Ex e d IIC T6 Gb Ext IIIC T60°C Db $(-40^{\circ}\text{C} \le \text{Ta} \le +55^{\circ}\text{C}) \text{ or }$

II 2 GD

Ex e d mb IIC T4 Gb Ex t IIIC T80°C Db $(-40^{\circ}C \le Ta \le +50^{\circ}C)$

Standards applied: IEC 60079-0:2007 Ed. 5

EN60079-1:2004 EN 60079-7:2007 IEC 60079-18:2009 Ed. 3

EN 61241-1:2004

Directive 2004/108/EC: Electromagnetic Compatibility Directive (EMC)

Standards applied: EN 61000-6-1:2007

> EN 61000-6-2:2005 EN 61000-6-3:2007 EN 61000-6-4:2007

The standards EN 60079-1:2004 and EN 61241-1:2004 are no longer harmonized. The requirements of these standards have been checked against the harmonized standards EN 60079-1:2007 and EN 60079-31:2009 and there were no major technical changes affecting the latest technical knowledge for the products listed above. Content of IEC 60079-0:2007 is identical to harmonized standard EN 60079-0:2009, content of IEC 60079-18:2009 is identical to harmonized standard EN60079-18:2009

On behalf of European Safety Systems Ltd., I declare that, on the date the equipment accompanied by this declaration is placed on the market, the equipment conforms with all technical and regulatory requirements of the above listed directives.

Martin Streetz

Quality Assurance Manager

Date and Place of Issue: London, 04/07/2012 **Document No:** DC-043-Issue_B