

1) Introduction

The GNExS2 and GNExS1 are flameproof sounders which are certified to meet the requirements of the ATEX directive 94/9/EC and the IECEx scheme. The sounders produce loud warning signals and can be used in hazardous areas where potentially flammable atmospheres may be present. Forty-five different stage alarm sounds can be selected by internal switches to independently set the first stage and second stage, the third and fourth stages are externally changed (see *tone table on Page 4*). The GNExS2 unit produces output levels in the 117dB (A) range and the GNExS1 unit produces output levels in the 110dB (A) range.

The sounders are Group II, EPL (equipment protection level) Gb. Dependant on unit type and ambient temperature the equipment is certified 'Ex d IIC Gb' and as such may be used in Zones 1 and 2 with flammable gases and vapours with apparatus groups IIA, IIB & IIC and temperature Classifications of T1, T2, T3 and T4 dependant on ambient temperature, see marking codes in section 2.

The equipment is also certified 'Ex d IIB Gb' and as such may be used in Zones 1 and 2 with flammable gases and vapours with apparatus groups IIA & IIB and temperature Classifications of T1, T2, T3, T4, T5 and T6 dependant on ambient temperature, see marking codes in section 2.

2) Marking

All units have a rating label, which carries the following important information:-

Unit Type No. GNExS2 or GNExS1


Input Voltage:	GNExS1	GNExS2
	10-30Vdc or 48Vdc	10-30Vdc or 48Vdc
	100 - 260Vac/dc	100 - 260Vac

Codes: GNExS1
 Ex d IIC T4 Gb for Ta -50°C to +50°C
 Ex d IIC T3 Gb for Ta -50°C to +70°C
 Ex d IIB T6 Gb for Ta -50°C to +50°C
 Ex d IIB T5 Gb for Ta -50°C to +65°C
 Ex d IIB T4 Gb for Ta -50°C to +70°C

Codes: GNExS2
 Ex d IIC T4 Gb for Ta -50°C to +50°C
 Ex d IIC T3 Gb for Ta -50°C to +58°C
 Ex d IIB T6 Gb for Ta -50°C to +50°C
 Ex d IIB T5 Gb for Ta -50°C to +58°C

Certificate No. SIRA 13ATEX1139X
 IECEx SIR 13.0029X

Epsilon x:
 Equipment Group
 and Category:

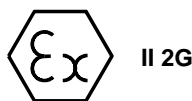

CE Marking:
 Notified Body No.



“Warnings”

DO NOT OPEN WHEN AN EXPLOSIVE ATMOSPHERE MAY BE PRESENT

ELECTROSTATIC HAZARD - CLEAN ONLY WITH A DAMP CLOTH

IF TEMPERATURE EXCEEDS 70°C AT ENTRY OR 80°C AT BRANCHING POINT USE SUITABLY RATED CABLE AND CABLE GLANDS

Year of Construction /
 Serial No. i.e. 13 / 1GS23000001

3) Type Approval Standards

The sounders have an EC Type Examination and IECEx certificates issued by KEMA and have been approved to the following standards:-

EN60079-0:2012	IEC60079-0:2011 (Ed6)	General Requirements
EN60079-1:2007	IEC60079-1:2007 (Ed6)	Flameproof Enclosure 'd'

4) Installation Requirements

The sounders must be installed in accordance with the latest issues of the relevant parts of the EN 60079 and IEC60079 standards – Selection, Installation and maintenance of electrical apparatus for use in potentially explosive atmospheres (other than mining applications or explosive processing and manufacture):-

EN60079-14:2008	Electrical Installations in Hazardous Areas (other than mines)
IEC60079-14:2007 (Ed4)	

EN60079-10-1:2009	Classification of Areas, Gas Atmosphere
-------------------	---

IEC60079-10:2008 (Ed1)

The installation of the units must also be in accordance with any local codes that may apply and should only be carried out by a competent electrical engineer who has the necessary training.

5) Zones, Gas Group, Category and Temperature Classification

The GNExS2 and GNExS1 sounders have been certified Ex d IIC T4 , T3 and Ex d IIB T6 , T5 ,T4 dependant on ambient temperature for full marking see section 2. This means that the units can be installed in locations with the following conditions:-

Area Classification:

Zone 1	Explosive gas air mixture likely to occur in normal operation.
Zone 2	Explosive gas air mixture not likely to occur, and if it does, it will only exist for a short time.

Gas Groupings:

Group IIA	Propane
Group IIB	Ethylene
Group IIC	Hydrogen and Acetylene

Equipment Category: 2G

Temperature Classification:

T1	400° C
T2	300° C
T3	200° C
T4	135° C
T5	100° C
T6	85° C

Ambient Temperature Range:

GNEsS1 - For range see Marking Codes Section 2

GNEsS2 - For range see Marking Codes Section 2

6) Sounder Location and Mounting

The location of the sounders should be made with due regard to the area over which the warning signal must be audible. The sounders should only be fixed to services that can carry the weight of the unit.

The sounder should be securely bolted to a suitable surface using the 7mm diameter bolt holes in the stainless steel U shaped mounting bracket (see figure 1). The angle can then be adjusted in the direction that the sound is primarily required to cover. This can be achieved by loosening the two large bracket screws in the side of the unit, which allow adjustment in steps of 18°. On completion of the installation the two large bracket adjustment screws on the side of the unit must be fully tightened to ensure that the unit cannot move in service.

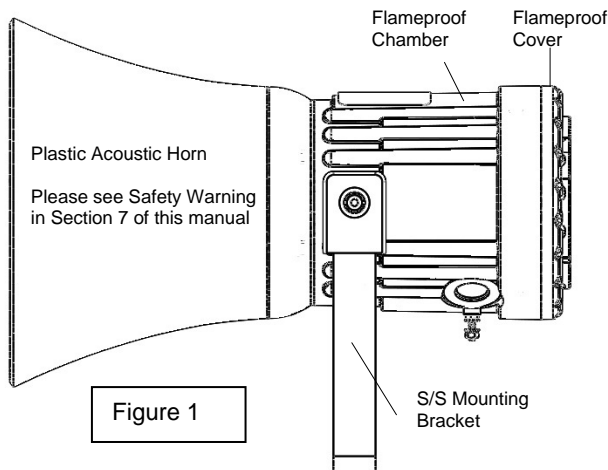


Figure 1

7) Safety Warning (Electrostatic Hazard)

The acoustic horn section is made of ABS Plastic, therefore to avoid a possible ELECTROSTATIC CHARGE the unit must only be cleaned with a damp cloth.

8) Access to the Flameproof Enclosure

In order to connect the electrical supply cables to the sounder it is necessary to remove the flameproof cover to gain access to the flameproof chamber. To achieve by loosening the M3 Grub Screw within the flameproof cover, and then unscrew the flameproof cover, taking extreme care not to damage the flameproof joints in the process.

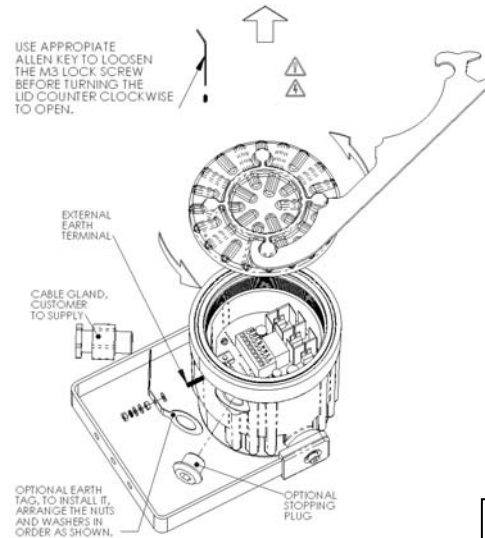


Figure 2

On completion of the cable wiring installation the flameproof joints should be inspected to ensure that they are clean and that they have not been damaged during installation. Also check that the 'O' ring seal is in place. When replacing the flameproof cover ensure that it is tightened fully with tool provided.

9) Power Supply Selection

It is important that a suitable power supply is used to run the sounders. The power supply selected must have the necessary capacity to provide the input current to all of the sounders connected to the system.

The following table shows the input current taken by the various sounder units:-

Unit Type	Input Voltage	Input Current	Max. I/P Volts
GNEsS2	12V DC	796mA	30V
GNEsS2	24V DC	896mA	30V
GNEsS2	48V DC	478.2mA	58V
GNEsS2	230V AC	210mA	260V
GNEsS2	115V AC	327mA	260V
GNEsS1	12V DC	126mA	30V
GNEsS1	24V DC	158mA	30V
GNEsS1	48V DC	75.6mA	58V
GNEsS1	230V AC	80mA	260V
GNEsS1	115V AC	93mA	260V

The input current will vary according to the voltage input level and the frequency of the tone selected. The current levels shown above are for the 440Hz Continuous tone @ nominal input voltage. The above table also shows the maximum voltages at which the sounders can be operated.

10) Cable Selection

When selecting the cable size consideration must be given to the input current that each unit draws (see table 2 of 4), the number of sounders on the line and the length of the cable runs. The cable size selected must have the necessary capacity to provide the input current to all of the sounders connected to the line.

SAFETY WARNING: If temperature exceeds 70°C at entry or 80°C at branching point use suitably rated cable and cable glands.

11) Earthing

Both AC and DC sounder units must be connected to a good quality earth. The units are provided with external earthing terminals which are both located on the terminal chamber section of the unit (see figures 2 and 3).

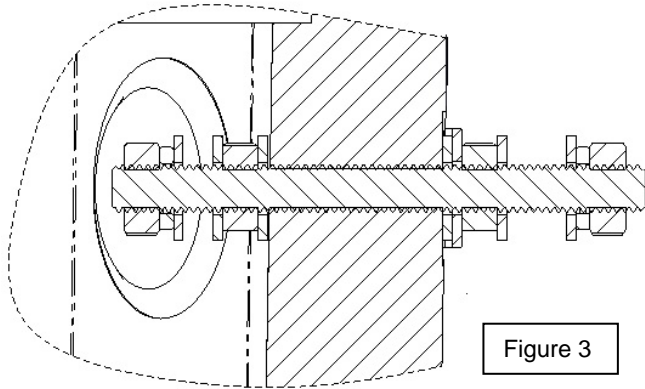


Figure 3

When using the external earth terminal a cable crimp lug must be used. The cable lug should be located between the two M4 stainless steel flat washers. The M4 stainless steel spring washer must be fixed between the outer flat washer and the M4 stainless steel nut to ensure that the cable lug is secured against loosening and twisting.

12) Cable Glands

The GNExS2 and GNExS2 sounders have dual cable gland entries which have an M20 x1.5 entry thread as standard. Only cable glands approved for Ex 'd' applications can be used, which must be suitable for the type of cable being used and also meet the requirements of the Ex 'd' flameproof installation standards EN 60079-14:2008 / IEC60079-14:2007.

SAFETY WARNING: If temperature exceeds 70°C at entry or 80°C at branching point use suitably rated cable and cable glands.

If a high IP (Ingress Protection) rating is required then a suitable sealing washer must be fitted under the cable gland.

When only one cable entry is used the other one must be closed with an Ex 'd' flameproof blanking plug, which must be suitably approved for the installation requirements.

13) Cable Connections

The cable connections are made into the terminal blocks on the electronic PCB assembly located in the flameproof enclosure. See section 8 of this manual for access to the flameproof enclosure.

On the AC units an eight way terminal block is provided for the live (x2), neutral (x2) & earth mains supply wires and also common (C) linking the second (S2) and third (S3) stages, (see figures 5 and 6).

On the DC units a six way terminal block is provided for +ve (x2) and -ve (x2) supply input and second (S2) and third (S3) stage modes of operation, (see figures 4 and 7).

GNExS2 DC Sounder

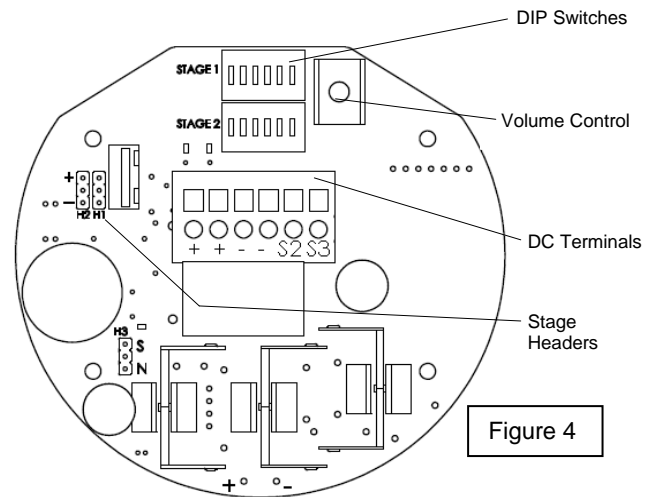


Figure 4

A single wire with a cross sectional area of up to 4mm² can be connected to each terminal way or if an input and output wire is required two 2.5mm² wires can be connected to each terminal way. When connecting wires to the terminals great care should be taken to dress the wire so that when the cover is inserted into the chamber the wires do not exert excess pressure on the terminal blocks. This is particularly important when using cables with large cross sectional areas such as 2.5mm² and above.

GNExS2 AC Sounder

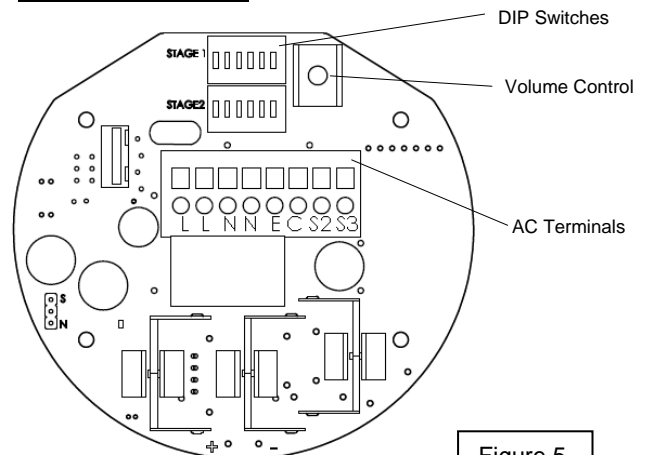


Figure 5

GNExS1 AC Sounder

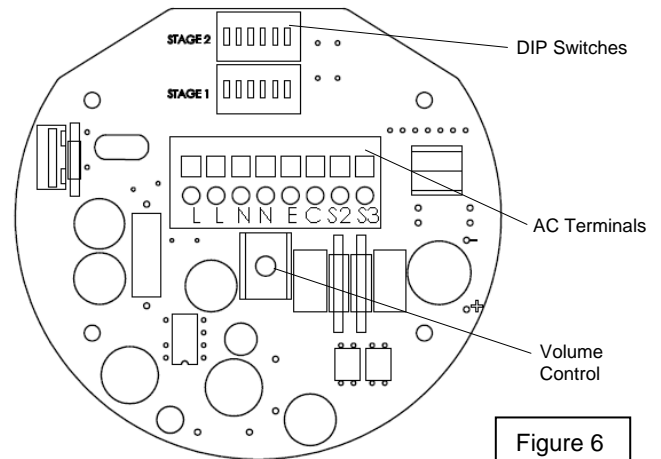


Figure 6

GNExS1 DC Sounder

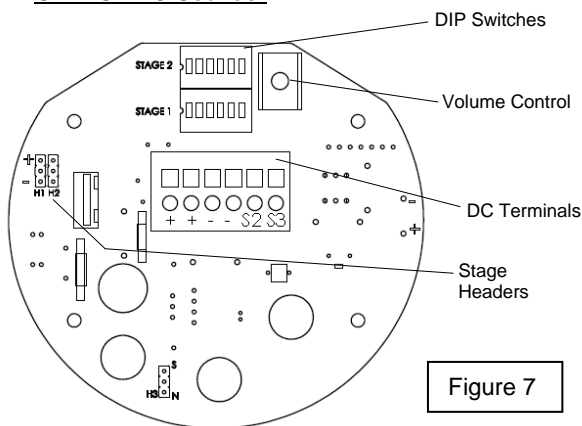


Figure 7

14) Tone Selection & 1st, 2nd, 3rd & 4th Stage Alarms

The GNExS2 and GNExS1 sounders have 45 different tones that can be selected independently for the first and second stage alarms. The sounders can then be switched to sound the second, third and fourth stage alarm tones. The tones are selected by operation of two DIP switches on the PCB for both DC and AC units. The tone table on page four shows the switch positions for the 45 tones and which tones are available for the third and fourth stages.

Stage one (S1) operation : Simply connect the supply voltage to the normal supply terminals (+ve and -ve for DC units, L and N for AC units). Dip switch 1 alters the stage one tones. The operation of the second, third and fourth stages is different for DC and AC units but the stage one supply terminals must also be connected.

DC Units Second, Third and Fourth Stage Tone Selection

The GNExS2 and GNExS1 DC sounders have the facility to use either +ve or -ve switching to change the tone to the second, third and fourth stages. For -ve switching connect the two headers on the pcb to the left-hand (marked -ve) and centre pins. For +ve switching connect the headers to the right hand (marked +ve) and the centre pins.

Stage two (S2) operation : Power +ve and -ve, depending on which switching mode link either a -ve or +ve supply line to the S2 terminal. Dip switch 2 alters stage two tone.

Stage three (S3) operation : Power +ve and -ve, depending on which switching mode link either a -ve or +ve supply line to the S3 terminal. Dip switch 1 alters stage three tone.

Stage four (S4) operation : Power +ve and -ve, depending on which switching mode link either a -ve or +ve supply line to both the S2 & S3 terminals. Dip switch 1 alters stage four tone.

AC Units Second, Third and Fourth Stage Tone Selection

To select the second, third and fourth stage tones on the GNExS2 and GNExS1 AC sounders.

Stage two (S2) operation : Power L and N, link the common (C) and S2 terminal. Dip switch 2 alters stage two tone.

Stage three (S3) operation : Power L and N, link the common (C) and S3 terminals. Dip switch 1 alters stage three tone.

Stage four (S4) operation : Power L and N, link the common (C) both the S2 and S3 terminals. Dip switch 1 alters stage three tone.

15) Volume Control

All GNExS2 and GNExS1 sounders have a volume control to adjust the output level. To set the required output level, adjust the potentiometer on the PCB. For maximum output level the potentiometer should be set to the fully clockwise position.

16) End of Line Monitoring (DC Units)

On GNExS2 and GNExS1 DC units, dc reverse line monitoring can be used if required. All DC sounders have a blocking diode fitted in their supply input lines. An end of line monitoring diode or an end of line monitoring resistor can be connected across the +ve and -ve terminals. If an end of line monitoring resistor is used it must have a minimum resistance value of 3k3 ohms and a minimum wattage of 0.5 watts or a minimum resistance value of 500 ohms and a min. wattage of 2 watts.

TONE SELECTION TABLE

E25 current GNEx 4 stage 45 tone table

Stage 1 Set DIP Switch 1	Frequency Description	Stage 2		Stage 3	Stage 4
		Set DIP Switch 1 & 2 1 2 3 4 5 6	Set DIP Switch 1 (S2)	Set DIP Switch 1 (S3)	Set DIP Switch 1 (S2 + S3)
Tone 1	340 Hz Continuous				Tone 1
Tone 2	800/1000Hz @ 0.25 sec Alternating				Tone 2
Tone 3	500/1200Hz @ 0.3Hz 0.5 sec Slow/Whoop				Tone 3
Tone 4	800/1000Hz @ 1Hz Sweeping				Tone 4
Tone 5	2400Hz Continuous				Tone 5
Tone 6	2400/2900Hz @ 7Hz Sweeping				Tone 6
Tone 7	2400/2900Hz @ 1Hz Sweeping				Tone 7
Tone 8	500/1200/500Hz @ 0.3Hz Sweeping				Tone 8
Tone 9	1200/500Hz @ 1Hz - DIN / PFEER P.T.A.P.				Tone 9
Tone 10	2400/2900Hz @ 2Hz Alternating				Tone 10
Tone 11	1000Hz @ 1Hz Intermittent				Tone 11
Tone 12	800/1000Hz @ 0.875Hz Alternating				Tone 12
Tone 13	2400Hz @ 1Hz Intermittent				Tone 13
Tone 14	800Hz 0.25sec on, 1 sec off Intermittent				Tone 14
Tone 15	800Hz Continuous				Tone 15
Tone 16	660Hz 150mS on, 150mS off Intermittent				Tone 16
Tone 17	544Hz (100mS)/440Hz (400mS) - NF S 32-001				Tone 17
Tone 18	660Hz 1.8sec on, 1.8sec off Intermittent				Tone 18
Tone 19	1.4KHz-1.6KHz 1s, 1.6KHz-1.4KHz 0.5s -NFC 48-265				Tone 19
Tone 20	660Hz Continuous				Tone 20
Tone 21	554Hz/440Hz @ 1Hz Alternating				Tone 21
Tone 22	544Hz @ 0.875 sec Intermittent				Tone 22
Tone 23	800Hz @ 2Hz Intermittent				Tone 23
Tone 24	800/1000Hz @ 50Hz Sweeping				Tone 24
Tone 25	2400/2900Hz @ 50Hz Sweeping				Tone 25
Tone 26	Bell				Tone 26
Tone 27	554Hz Continuous				Tone 27
Tone 28	440Hz Continuous				Tone 28
Tone 29	800/1000Hz @ 7Hz Sweeping				Tone 29
Tone 30	300Hz Continuous				Tone 30
Tone 31	660/1200Hz @ 1Hz Sweeping				Tone 31
Tone 32	Two tone chime.				Tone 32
Tone 33	745Hz @ 1Hz Intermittent				Tone 33
Tone 34	1000 & 2000Hz @ 0.5 sec Alternating - Singapore				Tone 34
Tone 35	420Hz @ 0.625 sec Australian Alert				Tone 35
Tone 36	500-1200Hz 3.75sec @ 0.25sec Australian Evac.				Tone 36
Tone 37	1000Hz Continuous - PFEER Toxic Gas				Tone 37
Tone 38	2000Hz Continuous				Tone 38
Tone 39	800Hz 0.25sec on, 1 sec off Intermittent				Tone 39
Tone 40	544Hz (100mS)/440Hz (400mS) - NF S 32-001				Tone 40
Tone 41	Motor Siren - slowrise to 1200 Hz				Tone 41
Tone 42	Motor Siren - slowrise to 800 Hz				Tone 42
Tone 43	1200 Hz Continuous				Tone 43
Tone 44	Motor Siren - slowrise to 2400 Hz				Tone 44
Tone 45	1KHz 1s on, 1s off Intermittent - PFEER Gen. Alarm				Tone 45

Wiring Diagram E

